

INSTALLATION INSTRUCTIONS

721 – LED Pendant

PD-72128/PD-72160

MODERN FORMS®

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Modern Forms. Substitution of parts or accessories not designated for use with this product by Modern Forms could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Modern Forms. Remplacer des pièces ou accessoires non conçus pour ce produit Modern Forms pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidus sur le luminaire. Nous recommandons aux clients qui résident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE

A



Wire Connector
Qty: 3pcs+1 Extra

B



Mounting Screw
Qty: 1 Extra

C




Alabaster
Qty: 64pcs+1 Extra

D



Cap Screw
Qty: 1 Extra

E



Wood Screw
Qty: 3pcs+1 Extra

F



Plastic Anchor
Qty: 3pcs+1 Extra

ModernForms.com

Phone (866) 810.6615

Fax (800) 526.2585

Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

West Manufacturing Facility

1700 S Archibald Ave

Ontario, CA 91761

INSTALLATION INSTRUCTIONS

721- LED Pendant PD-72128/PD-72160

MODERN FORMS®

FIG. 1


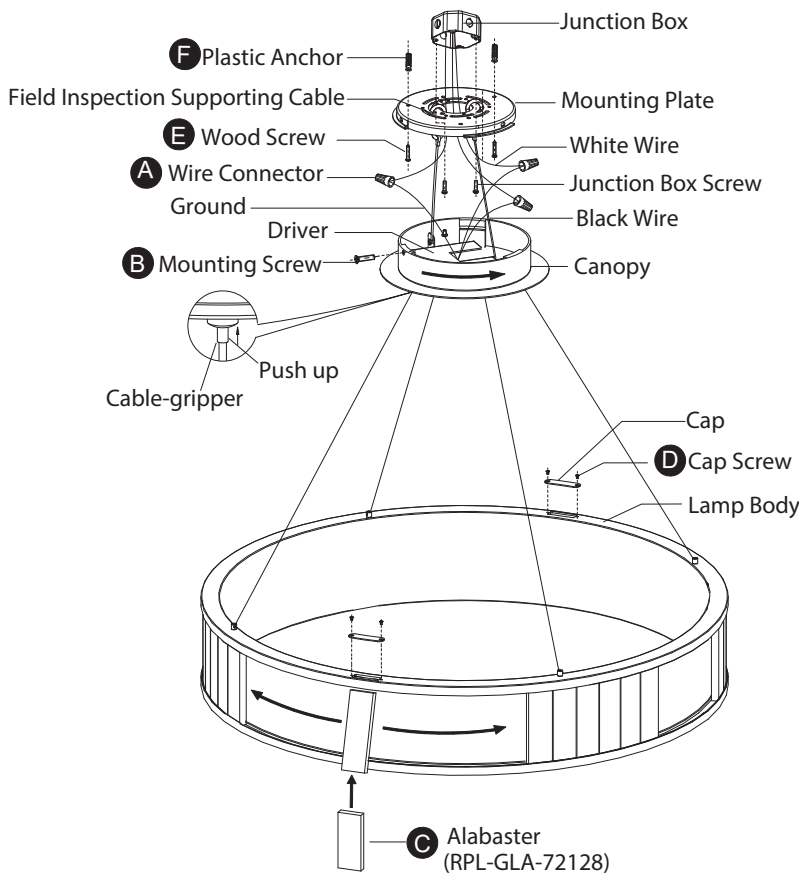


FIG. 2

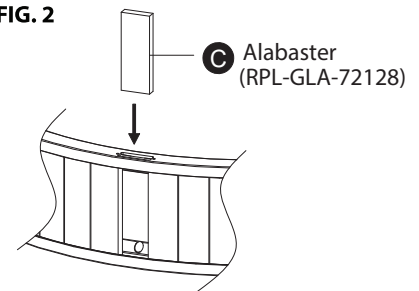

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

MOUNTING THE FIXTURE (Fig. 1)

3. Remove the cap screw (D) and cap from the fixture.
4. Remove the mounting screw (B) and mounting plate from the fixture.
5. Drill holes in the ceiling aligned with the key holes located in the mounting plate, insert the plastic anchor (F).
6. Secure the mounting plate to the junction box using standard junction box screws that comes with the junction box, fasten it to the ceiling using wood screw (E).

NOTE: (i) Using any other non-original-manufacturer provided junction box screw may result in field inspection supporting cable;
(ii) The side of the mounting plate marked "GND" must face out.

7. Adjust the fixture wire length by pushing the cable gripper on the canopy and pulling the wire as desired.
 - a) Retract the wires inside the canopy until the pendant is close to a desirable length prior to securing the fixture in place.

NOTE: retracting or extending excessive cable length through the cable gripper is not commended.

 - b) **Warning:** Shortening these cables without professional helps or electronic background is not advisable. Any modifications to the fixture may result in voiding the warranty of the product.
8. If shortening the cable is needed, make sure to identify how the wires are being connected and label each wire clearly before trimming/shortening (Fig. 4).

ModernForms.com
Phone (866) 810.6615
Fax (800) 526.2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1700 S Archibald Ave
Ontario, CA 91761

INSTALLATION INSTRUCTIONS

721- LED Pendant PD-72128/PD-72160

MODERN FORMS®

CONNECTING THE WIRES (Fig. 3)

9. Properly secure the field inspection supporting cable to the bracket on mounting plate to hang the fixture temporarily in place and aid installation.
10. Connect the driver's output wires to center cable as shown in Fig. 4, red to the center, and black to the bare, make sure that wire connectors are secured. Then tuck them inside the canopy.
11. Connect the driver's input wires to junction box wires as shown in Fig. 3, making sure that all wire connectors (A) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate using the GND screw provided. After wires are connected, tuck them carefully inside the junction box.
12. Secure the fixture by mounting the canopy onto the mounting plate. Turn and rotate the canopy in the direction of the arrow until it stops (Fig1).
13. Fasten the canopy to the mounting plate with mounting screws(B).


COMPLETING THE INSTALLATION

14. Insert the alabaster panels (C) into the slot from the bottom up (Fig.1), so it sits along the bottom frame of the fixture and side it over to your desired position .
15. The last piece of alabaster is not easy to be inserted from the bottom, and should be insert it from the top slot(Fig.2).
- NOTE:** Alabaster panels is fragile, please handle it with care.
16. When complete, place the cap over the fixture and secure with cap screws(D).

DIMMING WIRING INFORMATION (Fig. 4)

17. This fixture features electronic low voltage (ELV or TRAIC) or 0-10V dimming capabilities. See notes below for specific dimming wires information.
18. To utilize ELV or TRAIC dimming: use wires black (hot), white (neutral) and bare copper ground wire (ground).
19. To utilize 0-10V dimming: use wire purple (dim+), pink or gray (dim-), black (hot), white (neutral) and bare copper ground wire (ground).
- NOTE:** Make sure to connect 0-10V prior to power-up the fixture in order to allow the 0-10V dimming to function properly.

FIG. 3 Wiring

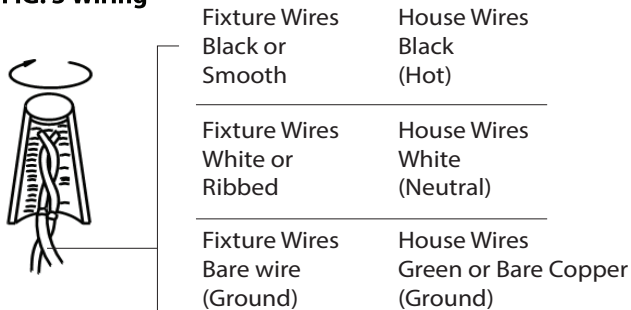

Mounting Plate Dimensions



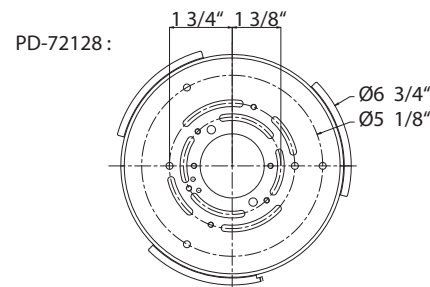


FIG. 4 Driver Wires (PD-72128)

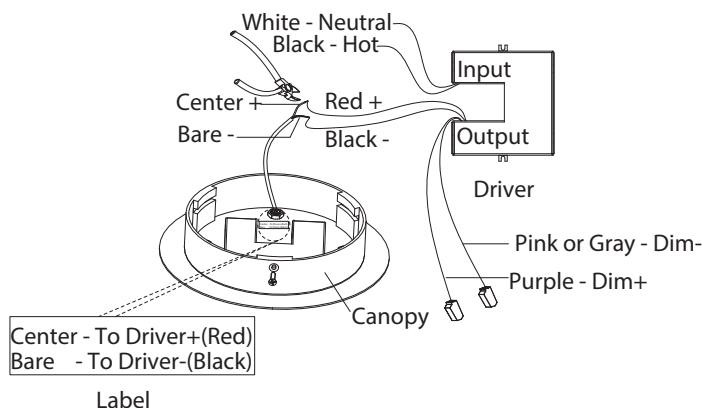

PD-72160 :

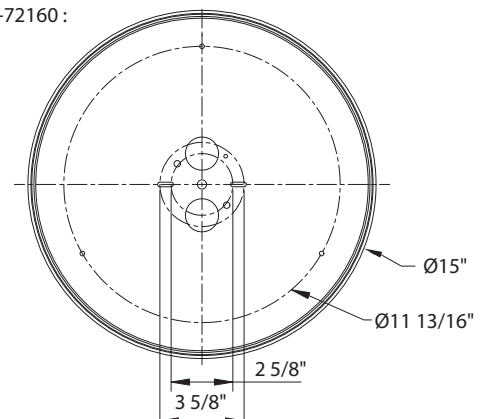

本页仅用于版本控制，请勿印刷！

THIS PAGE IS FOR VERSION CONTROL ONLY, PLEASE DO NOT PRINT !

序号 REV NO.	变更说明 REVISION NTOE	变更人 CHANGED BY	变更日期 REV DATE
1			
2			
3			
4			
5			

料号：*****
PART NO.

规格：80 克进口书写纸 A4，双面印刷，短边对折两下
Specifications: 80g imported writing paper A4,double-sided printing,
short side folded twice

图号：CIPD72160-06A
DRAWING NO.

设计：宗颖 8/25/2026
DESIGNED BY

审核：常伟 08/25/2026
CHECKED BY

标准化：艾勇 08/25/2026
STD BY

批准：林峰 08/26/2026
APPROVED BY

